



18C DRIP PAN / WATER BOWL

FOR MODEL 18C

IMPORTANT INFORMATION: 1) Integrates with the O-Grate. 2) A Water Bowl is not necessary for cooking. 3) BURN IN Bowl before using with food. Fill half with water and set it on the middle level. With a full load of charcoal, let the Bowl heat for a couple hours. 4) **CAUTION:** When using the Bowl to catch water and grease be EXTREMELY careful not to let the Bowl spill into the charcoal. An immediate and large grease fire may occur causing major bodily harm. Be safe, do not cook under a covered structure and remove the Bowl when the charcoal has completely cooled.



TRADITIONAL DRIP PAN

1. Set the O-Grate on the middle level
2. Set the Bowl inside O-Grate, align pins into holes
3. Place the Full Grate on top of the Bowl & O-Grate

WATER BOWL

1. Set the O-Grate at the middle level
2. Set the Bowl inside O-Grate, align pins into holes
3. Fill the Bowl with water
4. Hang short cuts of meat from the H-Frame or set meat on Full Grate on top of Bowl & O-Grate



MORE OPTIONS WITH 18C EXTENSION



BENEFITS OF THE EXTENSION KIT

The Extension Kit lifts the barrel 5 inches higher, allowing the O-Grate to sit on the bottom level and the Bowl to be used as a heat diffuser or water bowl. The Extension also increases the hanging distance.

HEAT DIFFUSER / WATER BOWL

Diffusing the heat creates a more mild convection cook and can lower the cooking temperature. The Bowl can be empty or filled with water or some other tasty liquids or ingredients to vaporize flavor into the food. Regular sand can also be used in the Bowl. It diffuses heat very well and requires no babysitting.

