




STAINLESS STEEL BASE

FOR MODEL 18C


INSTALLING FEET

1. Place existing feet on threaded stud.
2. Use new nuts (they come attached to the base).
3. Thread new nut on to stud.
Do not over tighten.

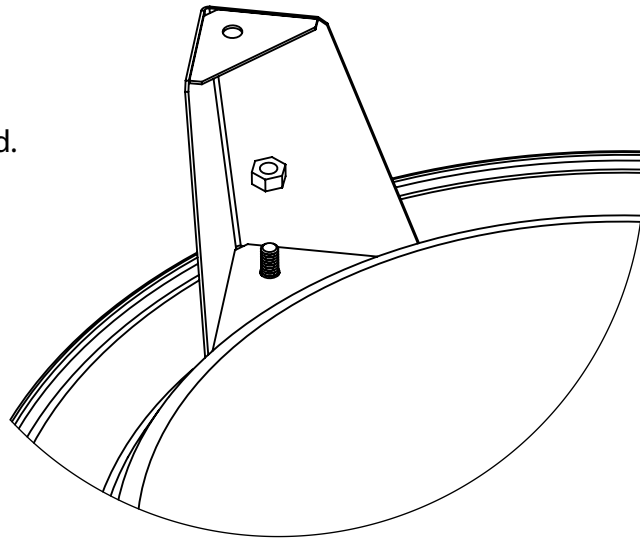

INSTALLING DAMPER

1. Use new damper and new screw (attached to new damper).
2. Slide damper into damper keeper on the bottom of the base with the angled step going upward.
3. Thread new screw all the way in while damper is half open. The screw does not actually attach to anything other than the damper slider. It simply prevents slider from being pulled out too far.
4. Tighten with phillips head screw driver.

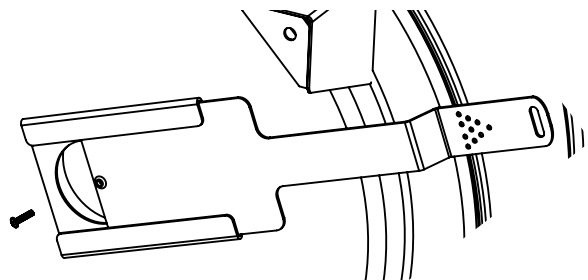

Made in the USA with stainless steel.

For help or questions please contact us at 844-508-2665 or sales@barrelhousecooker.com

#1015BHBISS